

Figure 1

e Congratulations

Congratulations on the purchase of your new advanced Bullard T4MAX Thermal Imager.

The new Bullard T4MAX combines advanced thermal imaging technology with our expertise in high heat, impact resistant engineered polymers to bring you the most durable thermal imager on the market. The T4MAX's innovative, compact design and logical, easy-to-use interface presents a truly personalized thermal imaging tool to today's firefighters.

The benefits of using thermal imaging technology as a firefighting tool encompass nearly every aspect of a firefighter's job. Thermal imaging is not, however, a technology designed to replace current firefighting tactics. Rather, it is a tool that allows the firefighter to be more effective and make better decisions. Some of the many uses for your Bullard T4MAX Thermal Imager include:

- Search and rescue
- Scene assessment
- Locating the seat of the fire
- Determining the spread of the fire
- Locating hot spots
- Identifying potential flashover situations
- Determining ventilation points
- Determining entry and exit points
- Overhaul
- Hazmat
- Wildland firefighting
- Incident investigation
- Training

NOTE

To ensure that we are able to reach you with any product or software updates, please fill out the warranty card enclosed with your Bullard T4MAX Thermal Imager.

WARNING

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT. YOUR THERMAL IMAGER IS LIKE ANY OTHER TOOL. IT MUST BE USED PROPERLY AND SAFELY. ALL USERS SHOULD BE TRAINED ON THE PROPER AND SAFE USE OF THERMAL IMAGING PRIOR TO USING THE T4MAX THERMAL IMAGER. THIS IS ESPECIALLY IMPORTANT FOR USERS WHO MAY USE THE T4MAX THERMAL IMAGER IN HAZARDOUS OR IDLH (IMMEDIATELY DANGEROUS TO LIFE AND HEALTH) ENVIRONMENTS. FAILURE TO FOLLOW THIS INFORMATION COULD RESULT IN DEATH OR SERIOUS INJURY.

WARNING

THIS IS A CLASS A PRODUCT. IN A DOMESTIC ENVIRONMENT THIS PRODUCT MAY CAUSE RADIO INTERFERENCE IN WHICH CASE THE USER MAY BE REQUIRED TO TAKE ADEQUATE MEASURE

Use and Operation

Power

To turn on your Bullard T4MAX Thermal Imager, depress and release the large, red power button under the LCD display (Figure 2). Upon pressing the power button the thermal imager will display the Bullard logo and initiate a calibration sequence. The thermal image will appear within four seconds. To turn off power, depress and hold the power button for three seconds and release.

NOTE

You will periodically observe a momentary freeze in the image. This is normal and is a function of the self calibration shutter. The shutter will activate every 30 seconds to three minutes, depending on the environment.

Relative Heat Indicator (RHI)

The T4MAX is equipped with temperature measurement capability. The right side of the display will show a bar graph or Relative Heat Indicator (RHI). The RHI will indicate the approximate temperature of the object viewed

within the “crosshairs” shown in the middle of the screen. The accuracy of the indicators is dependent on numerous factors including the distance from the object being viewed and its emissivity, which is the object’s ability to radiate heat. Units are calibrated with a preset emissivity corresponding with normal construction materials. Objects with emissivities that vary greatly from this, such as metals and shiny objects, will reduce the accuracy of the temperature indication. Additionally, temperature measurement accuracy decreases as the distance from the object in the “crosshairs” increases.

NOTE

The RHI provides a quick reference to compare objects of similar emissivities to serve as a guide to pinpoint intense heat sources. Due to the inherent issues with accuracy, use this feature with caution and verify indicated heat levels through traditional means whenever possible.

Super Red Hot Feature

The T4MAX features Super Red Hot high heat colorization. With the Super Red Hot feature, heat levels are identified by various color hues. Starting at 250°C, heated objects are tinted yellow and gradually transition to orange and then solid red as heat levels rise. The Super Red Hot feature identifies specific heat layers alerting firefighters to areas of intense heat. This feature provides an enhanced visual awareness of the hottest objects in a scene.

Electronic Thermal Throttle®

The T4MAX incorporates a highly useful and unique feature, the Electronic Thermal Throttle. The Thermal Throttle is ideal for pinpointing hot spots during overhaul, searching for overheated electrical equipment, or clarifying objects in ambient temperature situations. To activate the Thermal Throttle option, locate the two black buttons on the top of the T4MAX (Figure 1). Press the down button (the button closer to the front of the imager) to activate the Thermal Throttle. The Electronic Thermal Throttle will automatically sense the hottest area in the scene and color it blue. Continuing to press the down button (or holding it down) will further engage the Thermal Throttle and will color more of the scene blue, eventually coloring even the coolest objects blue.

NOTE

As the throttle engages more of the scene, the blue will become lighter in hue to help differentiate objects in the scene.


As you cycle through the scene, you’ll see the symbol “TT” and a corresponding number in the bottom left corner of the display. The “TT” indicates “Thermal Throttle” mode. The number (0-100) is a point of reference to indicate the level of Thermal Throttle engagement; by itself it has no specific meaning. To lessen the amount of blue in the scene, press (or hold) the up button. Alternatively, pressing both buttons simultaneously for one second will deactivate the Thermal Throttle.

NOTE

The T4MAX Thermal Imager takes approximately eight seconds to calibrate from initial startup. During this short startup period, the Electronic Thermal Throttle or Digital Zoom will not engage.


Digital Zoom Feature

The T4MAX enables magnification of far away scenes at both 2x and 4x zoom. With one simple push of the black “z” button, located next to the power button under the LCD display, the 2x zoom is enabled (Figure 2). A second push of the button activates the 4x zoom. A third push of the button disables the zoom function. The Digital Zoom feature also works seamlessly with Electronic Thermal Throttle and Super Red Hot.

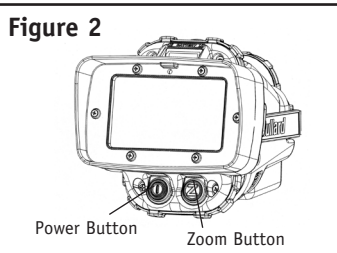

Using the Battery Charger

The battery should be charged in the battery charger using either the AC or DC adapter provided (Figure 3). To charge a battery, insert it into the charger so that the metal contacts on the battery are aligned with the metal contacts in the charger. A red light will illuminate on the charger to indicate that the battery is charging. When the light on the charger turns to green, the battery is fully charged. You may leave the battery in the charger indefinitely as the battery will not overcharge and the charger will initiate a trickle charge to maintain the battery’s charge. For maximum battery life and performance, you should remove the battery from the charger and discharge it completely on a monthly basis.

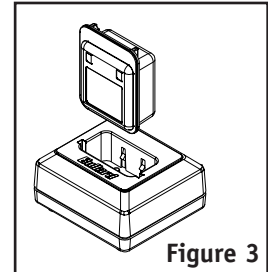


NOTE

If you do not see the red LED illuminate when you place a battery into the charger, the battery is not charging.

Loading/Unloading the Battery

Loading and unloading the battery on the Bullard T4MAX is straightforward (Figure 4). To install a battery, slide the battery into the groove on the bottom of the unit and ensure that the battery is properly seated. To remove a battery, depress both battery locking buttons simultaneously and slide the battery out of the unit. Since it can only be loaded one way, the battery is easily replaced in the dark. Additionally, as with all batteries, your Bullard rechargeable battery will experience a slow drain of its charge during storage. The amount of drain varies widely based on storage conditions. For best performance, charge each of your batteries every two weeks.

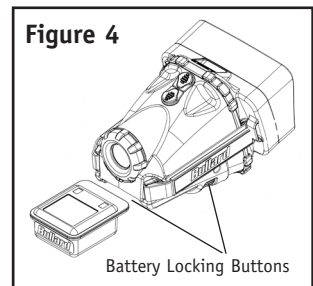

WARNING

DO NOT ALLOW THE METAL CONTACTS ON THE LABEL SIDE OF THE BATTERY TO COME IN CONTACT WITH A CONDUCTIVE SURFACE, SUCH AS A METAL TABLE OR ANOTHER BATTERY. THIS CAN COMPLETE THE BATTERY CIRCUIT AND CAUSE THE BATTERY TO OVERHEAT OR MELT. FAILURE TO OBSERVE THIS WARNING MAY RESULT IN PERMANENT BATTERY DAMAGE, PROPERTY DAMAGE AND/OR SERIOUS INJURY.

NOTE

Fully charged NiMH batteries will provide a run time of more than three hours. This run time will be less in extreme heat or extreme cold conditions and/or if the transmitter is in use. To extend the potential lifespan of your batteries, fully drain and recharge each battery monthly. To help extend the life of the rechargeable batteries and prevent unexpected instances of uncharged batteries, develop a clear formalized plan for maintaining, charging, and replacing your batteries.

Bullard provides an optional AA Alkaline battery case which can be used as an alternative to the standard 10 V NiMH rechargeable batteries. The AA alkaline battery case requires eight AA alkaline batteries. Once the batteries are installed, the case loads into the unit in the same manner as the standard NiMH battery. Due to the unique way that alkaline batteries disperse power to the unit, the LED indicators will report battery levels that are not necessarily indicative of the battery’s actual remaining charge. Fully

charged AA Alkaline batteries will typically operate a Bullard T4MAX Thermal Imager for two hours. Do not insert the AA Alkaline battery case into any Bullard battery chargers, including the Powerhouse.

▲ WARNING

THE T4MAX THERMAL IMAGER IS EXTREMELY SENSITIVE TO INTENSE, RADIANT HEAT SOURCES. NEVER POINT THE T4MAX AT THE SUN OR ANY OTHER SOURCE OF EXTREME RADIANT HEAT, AS THIS COULD SEVERELY DAMAGE THE THERMAL IMAGER.

Strap Assemblies

Side Straps

The side straps are designed to be field replaceable. Users can order replacements and install them without having to return the thermal imager to the factory.

Removing/Installing the Side Straps

To remove either of the right or left side straps, loosen the strap and pull it through the strap loop located on either side of the LCD display (Figure 5). Remove the screw that holds the strap to the imager. To install, fasten the strap to the unit using the screw provided. Do not over-tighten. Feed the strap through the strap loop and adjust to the desired length.

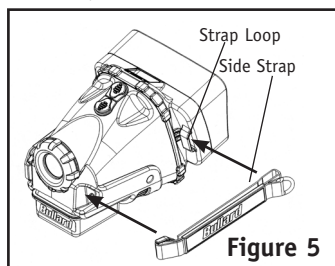


Figure 5

Adjusting the Side Straps

To adjust a side strap, loosen the hook and loop and set to the desired length.

Combination Strap

The combination strap (Figure 6) can be used either as a wrist strap to keep the imager from falling if it should slip from your hand, or as a gear strap, hooked directly onto your turnout gear or SCBA. As a wrist strap, the adjustable strap fits over the sleeve of your turnout gear and can adjust to any size wrist. The strap can be easily attached to either D-ring located on the thermal imager. As a gear strap, the strap can be attached to a D-ring on your turnout gear or SCBA and to a D-ring on the thermal imager. A quick release buckle serves as a safety release mechanism in case the thermal imager ever becomes lodged inhibiting movement. Simply depress the buckle and the thermal imager releases from the strap.




Figure 6

Care Instructions

The Bullard T4MAX Thermal Imager requires little maintenance. For best results, after each use:

- Clean the outside of the unit with mild soap or detergent.
- Wipe the lens with a soft cloth.
- Clean the display with a soft cloth.
- Check screw tightness on side straps and cover display
- Store your thermal imager in the optional truck mount or in the delivery case provided.
- All thermal imagers should be maintained using a proper program.

Cleaning the Lens

The Bullard T4MAX lens is recessed in an impact resistant bezel. The lens can be cleaned with a soft cloth and soapy water as required.

Replacing the Video Display Cover Window

The display cover (Figure 7) has a scratch resistant hard coating to minimize marring. However, if heavy scratching or gouging does occur, the cover window can be replaced. To do this, simply remove the six screws along the top, bottom, and sides of the window. Remove the plastic display cover window and replace with a new one (part number T4MAXWINDOW) making sure that the countersink slots around the mounting holes are facing outward. Do not over-tighten.

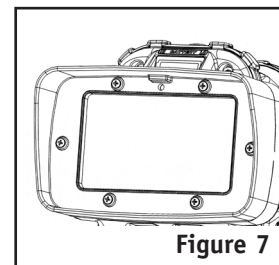


Figure 7

▲ CAUTION

DO NOT USE SOLVENTS OR PAINT THINNERS TO CLEAN YOUR BULLARD T4MAX THERMAL IMAGER AS THEY COULD PERMANENTLY MAR THE SURFACE OR DEGRADE THE PROTECTIVE PROPERTIES OF THE CASING.

DO NOT INTENTIONALLY SUBMERGE THE UNIT UNDERWATER OR SUBJECT THE UNIT TO HIGH PRESSURE WATER. FOLLOW CARE INSTRUCTIONS DESCRIBED ABOVE.

FAILURE TO OBSERVE THESE INSTRUCTIONS MAY RESULT IN PRODUCT DAMAGE. ANY DAMAGE CAUSED BY IMPROPER CARE IS NOT COVERED UNDER WARRANTY.

▲ WARNING

DO NOT ATTEMPT TO DISASSEMBLE THE BULLARD T4MAX THERMAL IMAGER. IF THE UNIT IS NOT FUNCTIONING PROMPTLY RETURN IT TO BULLARD FOR EVALUATION. DISASSEMBLING THE UNIT VOIDS ALL WARRANTIES.

LIKE ALL THERMAL IMAGERS SOLD AT THE TIME OF THIS PRINTING, THE BULLARD T4MAX IS NOT CERTIFIED AS INTRINSICALLY SAFE. DO NOT ATTEMPT TO REMOVE THE LENS GASKET OR THE REAR BOOT. THESE PARTS PROVIDE SEALING AND REMOVAL WILL BREAK THE SEAL EXPOSING THE UNIT TO POTENTIAL WATER DAMAGE. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DEATH, SERIOUS INJURY AND/OR PRODUCT DAMAGE.

THERMAL IMAGING IS NOT A TECHNOLOGY DESIGNED TO REPLACE CURRENT FIRE FIGHTING TACTICS. RATHER, IT IS A TOOL THAT ALLOWS THE FIREFIGHTER TO BE MORE EFFECTIVE AND TO MAKE BETTER DECISIONS.

FIREFIGHTERS CANNOT STOP USING BASIC FIREFIGHTER SAFETY TACTICS. ALL FIREFIGHTERS SHOULD RECEIVE PROPER TRAINING ON: HOW THERMAL IMAGERS WORK; THE USES AND LIMITATIONS OF THERMAL IMAGERS; IMAGE INTERPRETATION; AND THE SAFETY CONSIDERATIONS FOR THERMAL IMAGING USE.

Service

If your Bullard Thermal Imager is not performing properly, contact your local Bullard distributor where you purchased the unit. Describe the problem to the Bullard dealer as completely as possible. For your convenience, your local distributor will try to help you diagnose or correct the problem over the phone. Before returning your Bullard Thermal Imager, you should verify with your local distributor if the product should be returned to Bullard. Your local dealer and Bullard Customer Service will provide you with written permission and a return authorization number.

If the return is a non-warranty repair, your local distributor will provide you with a repair invoice estimate. To authorize repair, you must provide a purchase order to your distributor for the amount of the estimate. Once Bullard or a local distributor authorizes your repair, they will issue you a return authorization number so that you can return the unit to the Bullard service station. Bullard will repair the unit and ship it from our service station within 48 business hours. If the cost of repairs exceeds the stated quote by more than 15% or by more than 100 Euro, a Bullard representative will re-estimate your repair and your local distributor will contact you for authorization to complete repairs. After repairs are completed and the goods have been returned to you, the local distributor will invoice you for the actual repair amount.

NOTE

Do not attempt to disassemble the sealed case of your Bullard T4MAX Thermal Imager. If the unit is not functioning properly, return it to Bullard (as described in the Service section) for evaluation.

Disassembling the unit voids all warranties.

Prior to returning your Thermal Imager, decontaminate and clean your Thermal Imager to remove any hazardous or contaminated materials that may have settled on the product during use. Laws and/or shipping regulations prohibit the shipment of hazardous or contaminated materials. Products suspected of contamination will be professionally decontaminated at the customer's expense.

Returned products will be inspected upon return to the Bullard facility. If the repair is under warranty, Bullard will repair the unit and ship it from our factory within 48 business hours.

Warranty

Bullard warrants to the original purchaser that the Bullard T4MAX and all features/accessories installed in the unit are free of defects in materials and workmanship under intended use and service for a period of two (2) years from date of manufacture. Bullard's obligation under this warranty is limited to repairing or replacing, at Bullard's option, articles that are returned within the warranty period and that, after examination, are shown to Bullard's satisfaction to be defective, subject to the following limitations:

- a) Article must be returned to Bullard with shipping charges prepaid.
- b) Article must not be altered from its original configuration.
- c) Article must not have been misused, abused, or damaged in transport.
- d) Maintenance and field replaceable items, if defective, are covered under warranty for a ninety (90) day period from the date of purchase.

These items include:

- Straps
- Display covers

- e) Warranty period for batteries is 1 year from manufacturing date indicated on battery

Bullard provides a limited lifetime warranty on the T4MAX outer shell. This warrants that the outer shell is free of defects in materials and workmanship under intended use and service for the original purchaser. Bullard's obligation under this warranty is limited to repairing or replacing, at Bullard's option, articles that after examination are shown to Bullard's satisfaction to be defective, subject to the following limitations:

1. Article must not be altered from its original configuration.
2. Article must not have been misused, abused, or damaged in transport.
3. When the outer shell is obsolete and Bullard no longer stocks the part, the limited lifetime warranty will be terminated.

In no event shall Bullard be responsible for damages, loss of use, or other indirect, incidental, consequential or special costs, expenses or damages incurred by the purchaser, notwithstanding that Bullard has been advised of the possibility of such damages.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to two (2) years from the date of manufacture of this.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Ordering Information

CATALOG NUMBER	DESCRIPTION	CATALOG NUMBER	DESCRIPTION
T4MAXE	Bullard T4MAX Thermal Imager (includes Bullard Thermal Imager, two 10 V NiMH rechargeable batteries, 10 V charger with 110 VAC (USA only) and 12 VDC adapters, combination strap, and delivery case)	T3CHARGER	Charger for NiMH rechargeable batteries POWERHOUSE Truck mounted Direct Charge System; this system includes: vehicle mount, built-in battery charger, direct-wiring kit, and attachment hardware
T3TRANSONLY2E	Two-channel wireless remote transmitter (housed in quick attach handle) - receiving system not included	POWERHOUSEE	Truck mounted Direct Charge System; this system includes: vehicle mount, built-in battery charger, direct-wiring kit, and attachment hardware
ML5	MobileLink two-channel handheld receiver with one 10V NiMH rechargeable battery and one 10V charger with 110 BAC (USA only) and 12 VDC adapter	POWERHOUSEKIT	Kit for Powerhouse truck charger that enables free standing use with either AC or DC power supplies
REC2E	Two-channel receiver system (includes the antenna, receiver, and all associated cabling necessary for receiving transmitted video signal)	T3HANDLEE	Quick-attach handle
T3NIMH	10 V NiMH rechargeable battery	HANDLEVO	Quick-attach handle with video-out
T3ALK	AA Alkaline Battery Case	HARDCASE	Heavy-duty hard case to house the Bullard T4MAX and components
T3COMBOSTRAP	Combination wrist and gear strap	T4MAXCASE	Heavy-duty hard case to house the Bullard T4MAX and components
T3STRAPKIT	Replacement strap kit includes left and right side straps	T3RETRACT	Retractable strap kit that keeps the T4MAX convenient yet out of the way
T4MAXWINDOW	Replacement hard coated polycarbonate display cover	TACPORT	Provides video-out functionality and auxiliary power ports for extended operation from an external power supply

EC – DECLARATION OF CONFORMITY

Manufacturer:

E.D. Bullard Co.
1898 Safety Way
Cynthiana, KY 41031
USA

**Authorized Representative
in the European Community:**

Bullard GmbH
Lilienthalstrasse 12
53424 Remagen
Germany

Hereby declares that the product:

T4 Series Thermal Imager
Model Number: T4MAX


to which this declaration refers conforms to the following standards:

EN55022: 1994, A1:1995, A2:1997
EN61000-3-3: 1995
EN61000-3-2: 2000
EN55024: 1998

according to the essential protection requirements and other provisions of
the EMC Directive 1989/336/EEC. Test records are on file at Bullard's
headquarters, Cynthiana, KY, USA.



Signed: _____


Lincoln J. Dreher
Director of Product Development

Date: 7/Sept/11

**Americas:
Bullard**

1898 Safety Way
Cynthiana, KY 41031-9303 • USA
Toll-free within USA: 877-BULLARD (285-5273)
Tel: +1-859-234-6616
Fax: +1-859-234-8987

Europe:

Bullard GmbH
Lilienthalstrasse 12
53424 Remagen • Germany
Tel: +49-2642 999980
Fax: +49-2642 9999829

Asia-Pacific:

Bullard Asia Pacific Pte. Ltd.
LHK Building
701, Sims Drive, #04-03
Singapore 387383
Tel: +65-6745-0556
Fax: +65-6745-5176



©2012 Bullard. All rights reserved.
Electronic Thermal Throttle is a registered
trademark of Bullard.